
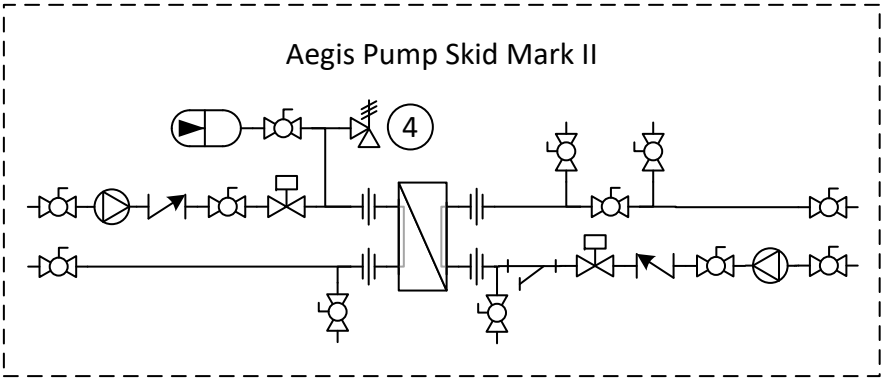


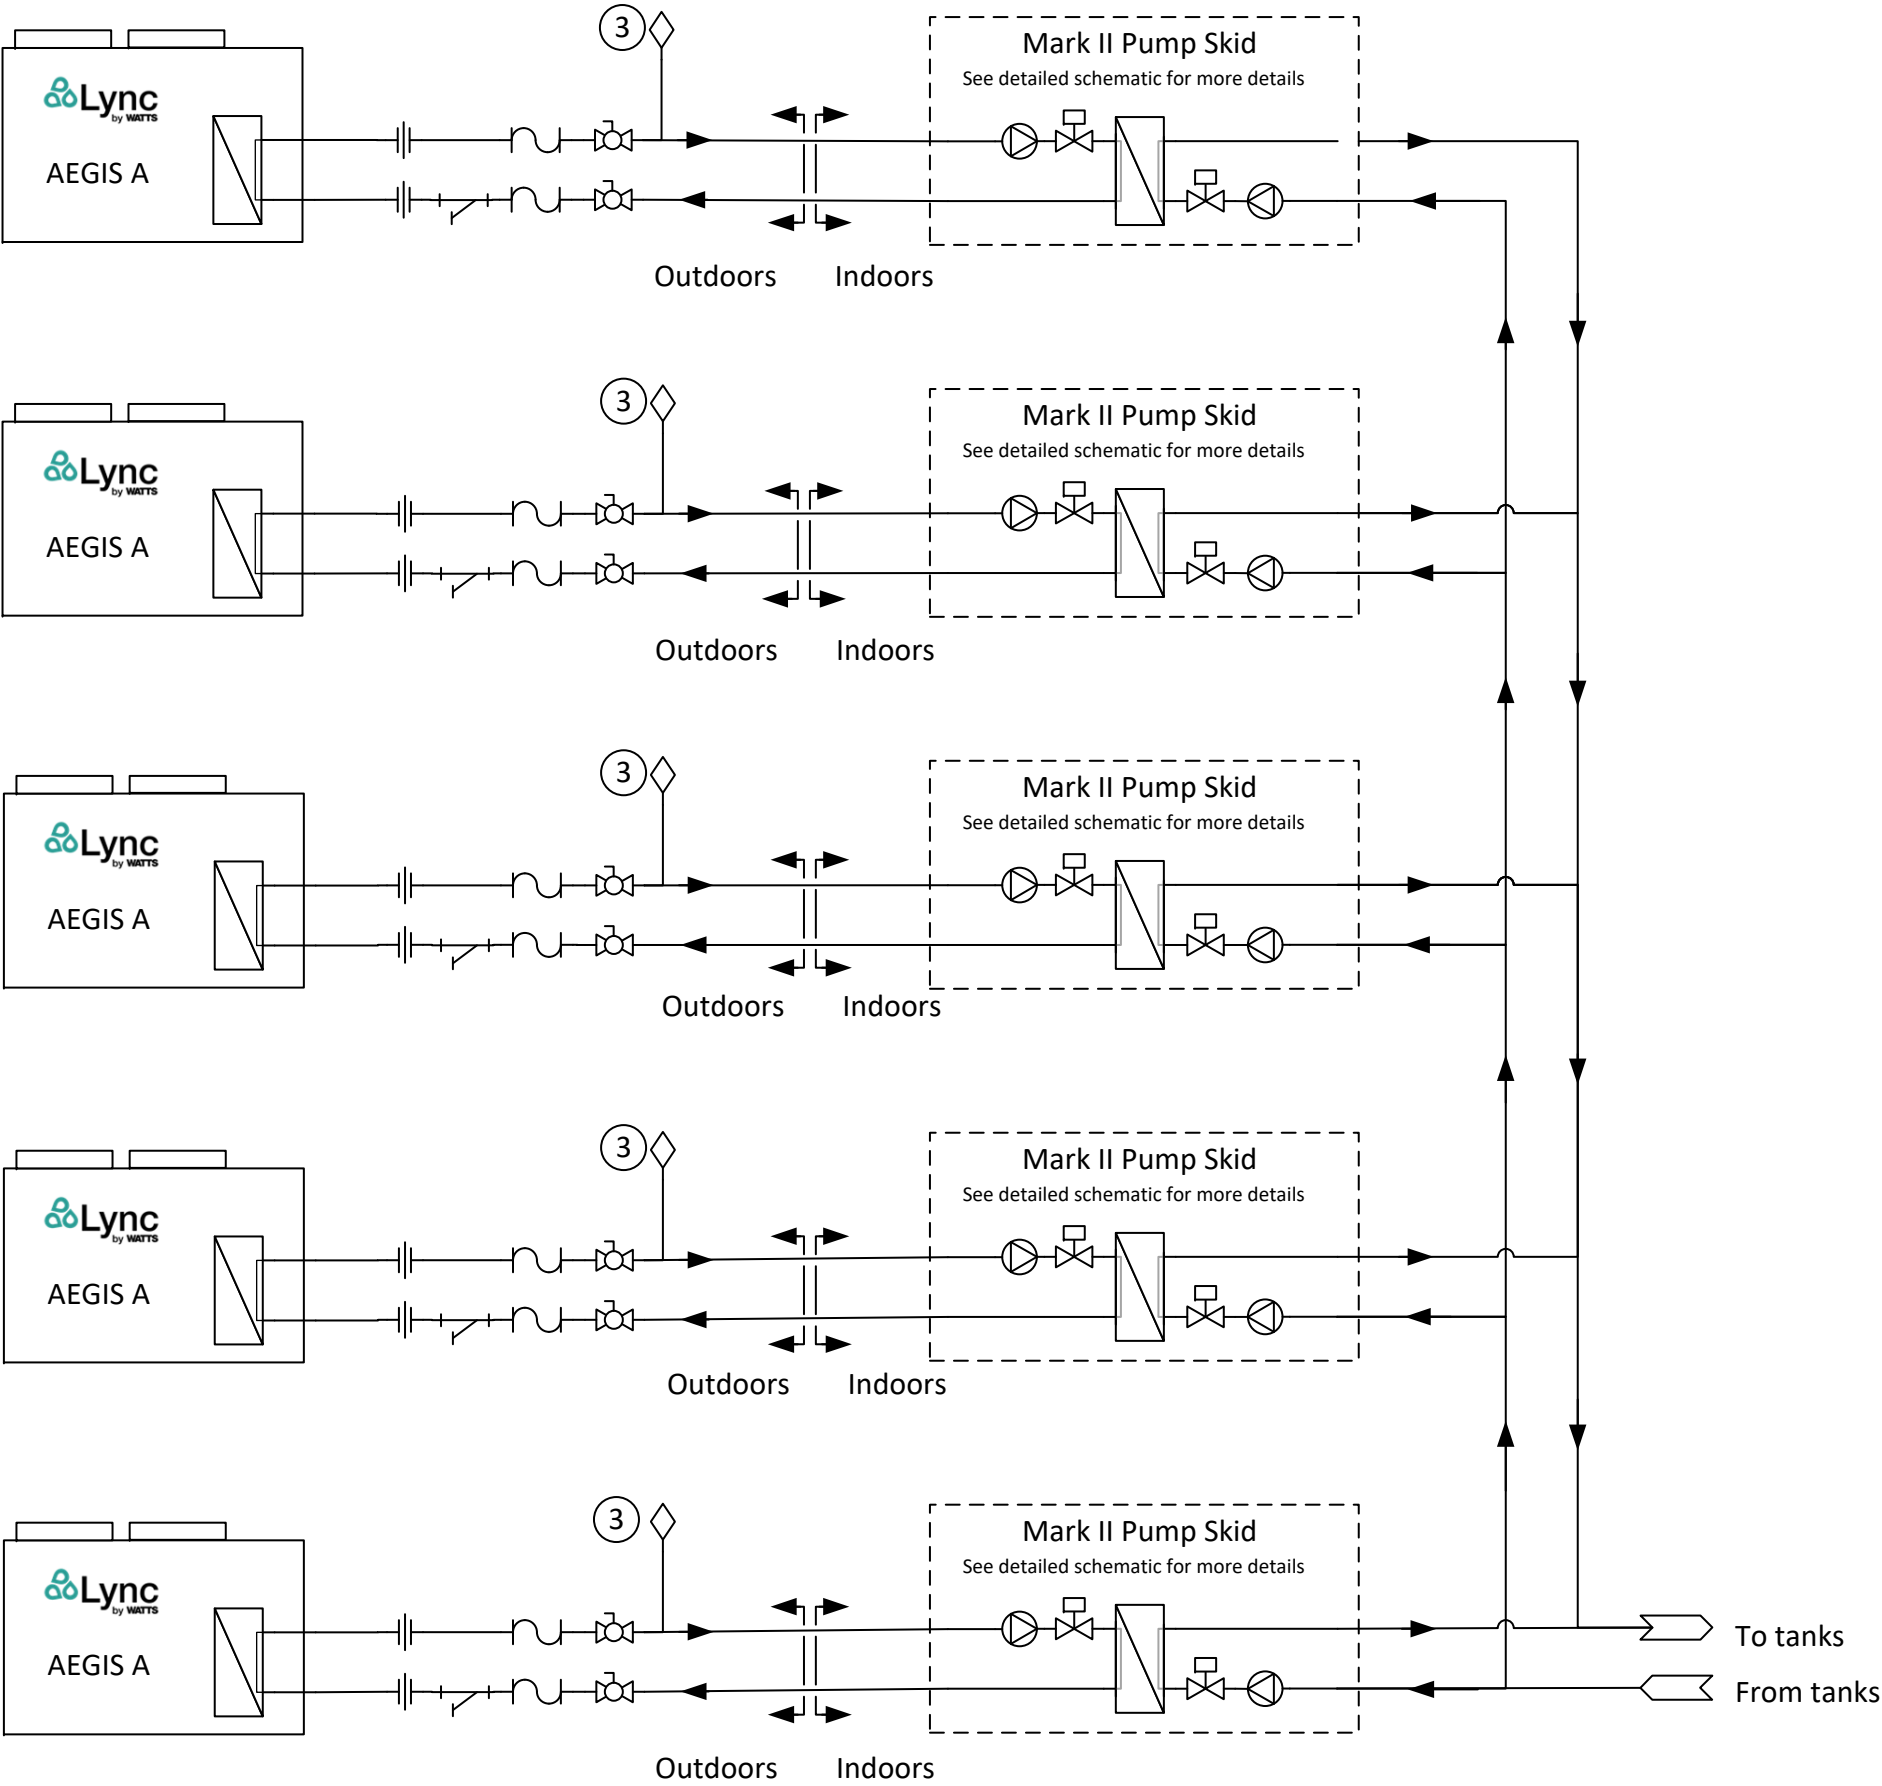

Symbols

- Pressure Relief Valve
- Balance Valve
- Union
- Air Vent
- Pump
- Backflow Preventer
- Strainer
- Flexible Fitting
- Mixing Valve
- Ball Valve
- Expansion Vessel
- Check Valve
- Injection Tee
- Motorized Valve

- Notes:
- 1) Final pump skid design subject to change.
 - 2) Pipe flow velocity not to exceed 2 ft./sec. Use 1 ¼" copper pipe for Aegis 250 and 350 and 1 ½" copper pipe Aegis 500 between heat pumps and skids.
 - 3) Air vent must be installed at the highest point in the plumbing. Manual shut off valve recommended below air vent.
 - 4) PRV must be piped within 18" of floor or per plumbing code on each pump skid.