








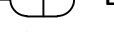


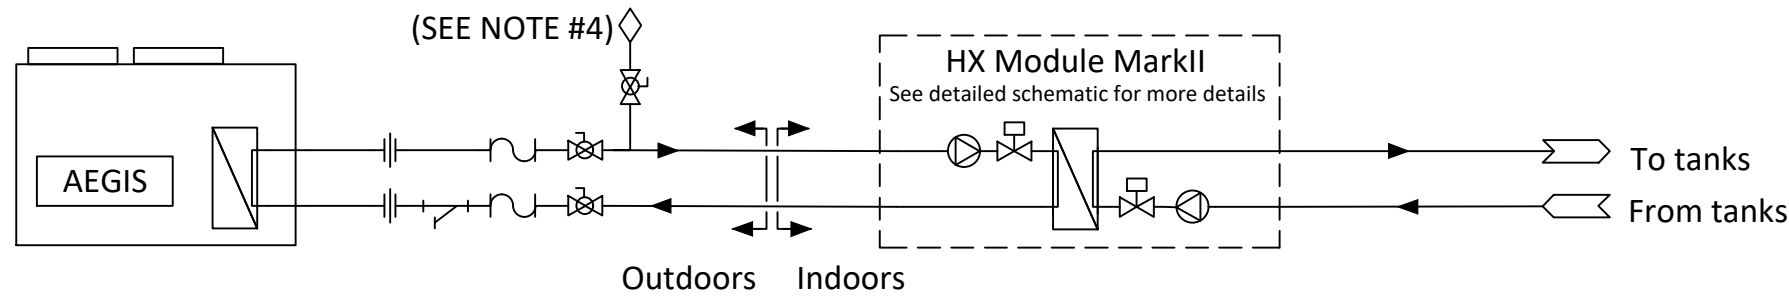


Symbols

-  Pressure Relief Valve
-  Balance Valve
-  Union
-  Air Eliminator
-  Pump
-  Strainer
-  Flexible Fitting
-  Mixing Valve
-  Ball Valve
-  Expansion Vessel
-  Check Valve
-  Motorized Valve



NOTES:

- 1) NOT FOR CONSTRUCTION.
- 2) FINAL HEAT EXCHANGER MODULE DESIGN SUBJECT TO CHANGE.
- 3) PIPE FLOW VELOCITY NOT TO EXCEED 2 ft./sec. USE 1-1/4" COPPER PIPE FOR AEGS 250 AND 350 AND 1-1/2" COPPER PIPE FOR AEGIS 500 BETWEEN HEAT PUMPS AND SKIDS.
- 4) AIR ELIMINATOR MUST BE INSTALLED AT THE HIGHEST POINT IN PLUMBING. MANUAL SHUT OFF VALVE RECOMMENDED BELOW AIR VENT.
- 5) PRV MUST BE PIPED WITHIN 18" OF FLOOR OR PER PLUMBING CODE ON EACH HEAT EXCHANGER MODULE.

Lync by WATS Blauvelt, NY
Fort Worth, TX

AEGIS MARK II SINGLE 1 UNIT
INSTALLATION

DWN.BY K.S. DATE 040324
SCALE NTS
APPD. K.S. DATE 070124

SD-L-1303

REV.
A